


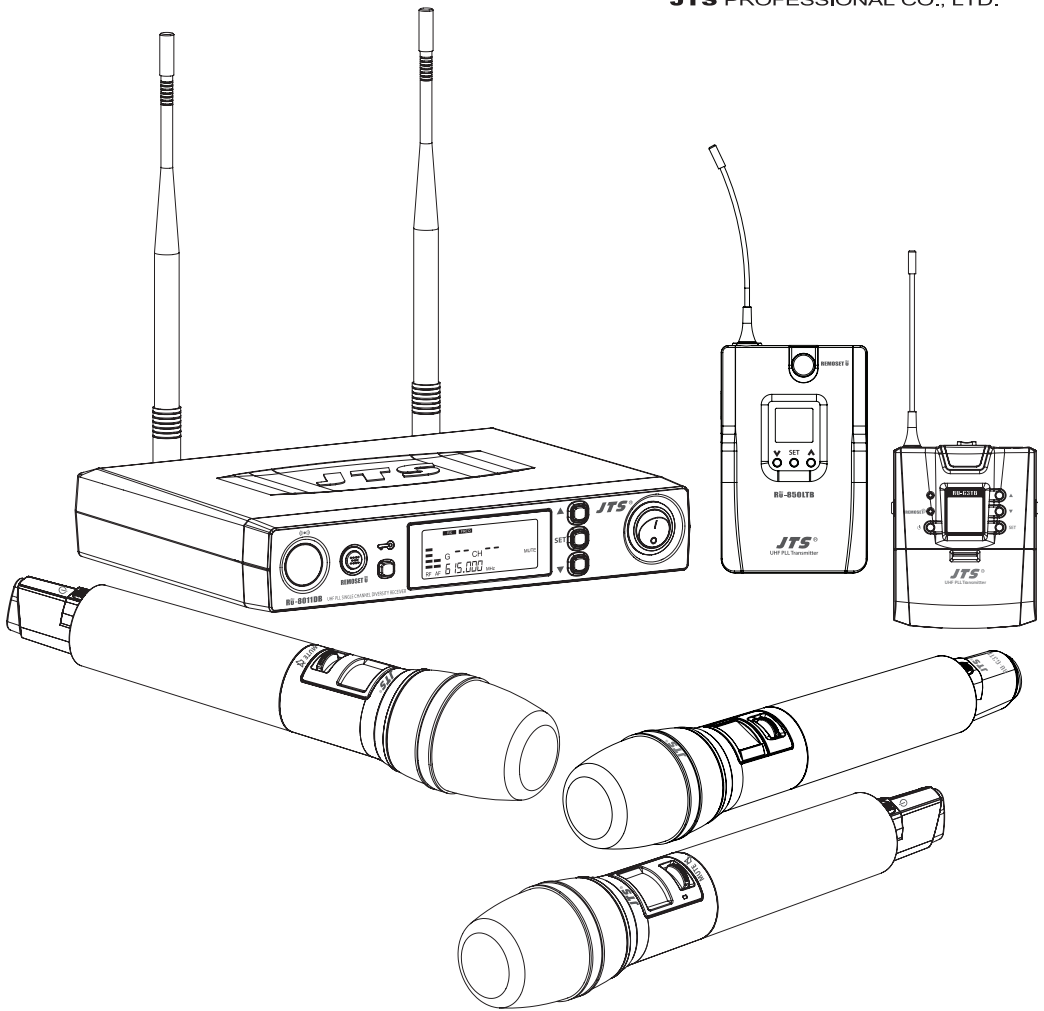

JTS PROFESSIONAL CO., LTD.



Instruction Manual

UHF PLL

RŨ-8011(D)DB / RŨ-8012DB

RŨ-850(L)TH / RŨ-850(L)TB

RŨ-G3TH / RŨ-G3TB



With JTS **REMOSETŨ** Ultrasonic Synchronizing Technology

Table of Contents

1.	Notes for system operations	1
2.	Features	1
3.	Specifications	2
	3-1 UHF PLL single/dual-channel diversity receiver	2
	3-2 UHF PLL hand-held transmitter	4
	3-3 UHF PLL body-pack transmitter	5
	3-4 Optional condenser microphone	6
4.	Description of parts	8
	4-1 UHF PLL single-channel diversity receiver // RŨ-8011D	8
	4-2 UHF PLL single-channel diversity receiver // RŨ-8011DB	10
	4-3 UHF PLL dual-channel diversity receiver // RŨ-8012DB	12
	4-4 UHF PLL hand-held transmitter // RŨ-850TH	14
	4-5 UHF PLL hand-held transmitter // RŨ-850LTH	15
	4-6 UHF PLL hand-held transmitter // RŨ-G3TH	16
	4-7 UHF PLL body-pack transmitter // RŨ-850TB	18
	4-8 UHF PLL body-pack transmitter // RŨ-850LTB	19
	4-9 UHF PLL body-pack transmitter // RŨ- G3TB	20
	4-10 Accessories	21
	4-11 Optional Condenser Microphone	21
5.	Connecting	24
	5-1 How to connect the receiver	24
	5-2 Transmitter installation // RŨ-850TH / RŨ-850LTH / RŨ-G3TH RŨ-850TB / RŨ-850LTB / RŨ- G3TB	25
6.	Instructions for use	27
	6-1 How to use // RŨ-8011D	27
	6-2 How to use // RŨ-8011DB	30
	6-3 How to use // RŨ-8012DB	33
	6-4 How to use // RŨ-850TH / RŨ-850TB	36
	6-5 How to use // RŨ-850LTH / RŨ-850LTB	37
	6-6 How to use // RŨ-G3TH / RŨ- G3TB	39
7.	Notes for the product	41

1. Notes for system operations

- Before connecting the power, check that the power requirement shown on the unit is the same as the power output on the adaptor supplied.
- Do not leave the unit at where the humidity and temperature are high.
- Dry your hands before operating the system.
- Keep the unit away from fire and heat source.
- Turn the volume to minimum at both the mixer and amplifier before setting up the system.
- Caution : The suitable environment for this product is with a temperature between -10°C (14°F) and +50°C (122°F).

2. Features

- 6 groups are provided as default. Every group contains up to 22 default channels.
- There are in total 1,440 channels to choose from.
- 36MHz bandwidth.
- The patented **REMOSET**  ultrasonic pairing for synchronized setting of all parameters
- Channel scan
- Adjustable receiving sensitivity
- Digital volume control
- Automatic microphone power off

3. Specifications

3-1 UHF PLL single/dual-channel diversity receiver

Model	Rũ-8011D	Rũ-8011DB	Rũ-8012DB
Frequency Oscillation Mode	Phase-locked loop (PLL)		
Carrier Frequency Range	470~960 MHz		
Remoset Frequency	Ultrasonic		
Diversity	Antenna diversity		
Bandwidth	36MHz		
Signal/Noise Ratio	>105dB(A)		
Total Harmonic Distortion (Thd)	<0.6%@1KHz		
Receiving Sensitivity	-95dBm , S/N>80dB		
Image Rejection Ratio	>80 dB		
Frequency Response	60Hz~15KHz±2dB	50Hz~16KHz±2dB	
Antenna Type	1/4λ Fixed antenna	1/2λ BNC detachable	
Antenna Booster Power	None	DC12~15V/100mA	
Function Display By	LCD		
Contents Of Display	Group, channel, antenna A/B, muting level, AF indication, RF indication, channel scanning, output level attenuation, volume indication	Group, channel, frequency, battery level, antenna A/B, muting level, AF indication, RF indication, channel scanning, output level attenuation, volume indication	
Control Functions	Power, group, channel, muting level, channel scan (on/off), button lock, volume, output attenuation (XLR)	Power, group, channel, frequency, muting level, button lock, volume, output attenuation (XLR), channel scan (on/off)	
Audio Frequency Output Level (MAX)	Ø6.3 Phone Jack : +4dBu		
	XLR Jack : +10dBu(Line) 、 -10dBu(MIC)		
Audio Frequency Output Impedance	600Ω		

Model	RŨ-8011D	RŨ-8011DB	RŨ-8012DB
Muting	Noise muting and tone code locking		
Output Port	1 x balanced XLR jack 1 x unbalanced ϕ 6.3 jack		2 x balanced XLR jack 2 x unbalanced ϕ 6.3 jack
Power Supply	DC12~15V/300mA		12~15V DC / 500mA
Dimension (Mm)	212.3mm (W) x 38.3mm (H) x 144mm (L)		

3-2 UHF PLL hand-held transmitter

Model	Rũ-850TH	Rũ-850LTH	Rũ-G3TH
Frequency Oscillation Mode	Phase-locked loop (PLL)		
Carrier Wave Frequency Range	470~960 MHz		
Remoset Frequency	Ultrasonic		
RF Power Output	10mW/50mW(as per local regulations)		
RF Stability	<±10KHz@Fc		
Modulation Frequency Shift	±48KHz		
Harmonic Radiation	<-50dBc		
Functions	Mute, auto off, sensitivity adjustment, low power indication		
Display By	LED	LCD+LED	
Controls	Power, mute	Power, mute, group, channel, frequency, sensitivity adjustment, auto off, button lock, RF power	
Battery	AA alkali battery or MiNH rechargeable battery x 2		
Charging	No	Yes	
Dimension	51mm (W) x 269mm (H) x 26mm (L)		

3-3 UHF PLL body-pack transmitter

Model	Rũ-850TB	Rũ-850LTB	Rũ- G3TB
Frequency Oscillation Mode	Phase-locked loop (PLL)		
Carrier Wave Frequency Range	470~960MHz		
Remoset Frequency	Ultrasonic		
RF Power Output	10mW/50mW(as per local regulations)		
RF Stability	<±10KHz@Fc		
Modulation Frequency Shift	±48KHz		
Harmonic Radiation	<-50dBc		
Functions	Mute, auto off, input level attenuation, sensitivity adjustment, low power indication		Mute, auto off, input level attenuation, sensitivity adjustment, low power indication, RF power
Display By	LED	LCD+LED	
Input Port	4 pin Mini XLR		
Controls	Power, mute	Power, mute, group, channel, frequency, sensitivity adjustment, input level attenuation, auto off	
Battery	AA alkali battery or MiNH rechargeable battery x 2		
Charging	No	Yes	
Dimension	62mm (W) x 97mm (H) x 20mm (L)		62mm (W) x 80.3mm (H) x 22.6mm (L)

3-4 Optional condenser microphone

Lavaliere microphone

Model	CM-501	CM-201i	CM-125i
Connector	4-pin mini XLR	4-pin mini	4-pin mini XLR
Frequency Response	100~15,000 Hz	XLR60~15,000 Hz	50~18,000 Hz
Polar Pattern	Cardioid	Omni-directivity	
Sensitivity (at 1000Hz)	-60 ± 3dB	-60 ± 3dB	-53 ± 3dB
Impedance	2.2K Ω		4.4K Ω
Max. SPL for 1% THD	130dB		
Dimension (mm)	Ø10.1mm (W) x 26.4mm (H)	Ø5mm (W) x 9mm (H)	Ø4mm (W) x 11mm (H)
Net Weight	21.5g	20.7g	7g (cable not included)

Headset microphone

Model	CM-214i	CM-214Ui	CM-214ULi
Connector	801C4 (4P Mini XLR)	4P Mini XLR	801C3 (3P Mini XLR) 801C4 (4P Mini XLR) 801CS (3.5 stereo plug)
Option Connector	801C3 (3P Mini XLR) 801CS (3.5 stereo plug) 801CR		801CR
Frequency Response	60~15,000 Hz	30~18,000 Hz	100 ~ 18,000Hz
Polar Pattern	Omni-directional	Cardioid	
Sensitivity (at 1000Hz)	-60±3 dB	-68±3 dB	-65±3 dB
Impedance	1.8kΩ	680Ω	1.8kΩ
Max. SPL for 1% THD	130dB		120dB
Dimension(mm)	125mm(W) x 134mm(H)x 157mm(D)	205mm(W)x 134mm(H)x 157mm(D)	125mm(W)x 134mm(H)x 157mm(D)
Net Weight	32.9g	38.4g	18g (cable excluded)

Model	CM-235i	CX-504
Connector	801C4 (4P Mini XLR)	4P Mini XLR
Frequency Response	50~18,000 Hz	30~18,000 Hz
Polar Pattern	Omni-directional	Cardioid
Sensitivity (at 1000Hz)	-53 ± 3dB	-68 ± 3dB
Impedance	1.8kΩ	680Ω
Max. SPL for 1% THD	130dB	130dB
Dimension(mm)	155mm(W)x 134mm(H)x 157mm(D)	285mm(W)x 55mm(H)x 111.3mm(D)
Net Weight	17g (cable excluded)	56.3g


Ear-hook microphone //

Model No	CM-801 / CM-804i	CM-8015 / CM-825i
Connector	801C4 (4P Mini XLR)	801C4 (4P Mini XLR)
Option Connector	801C3 (3P Mini XLR) 801CS (3.5 stereo plug) 801CR	801C3 (3P Mini XLR) 801CS (3.5 stereo plug) 801CR
Frequency Response	60~15,000 Hz	50~18,000 Hz
Polar Pattern	Omni-directional	Omni-directional
Sensitivity (at 1000Hz)	-64±3 dB	-53±3 dB
Impedance	1.8kΩ	1.8kΩ
Max. SPL for 1% THD	130dB	130dB


4. Description of parts

4-1 UHF PLL single-channel diversity receiver // **RŨ-8011D**

Front panel

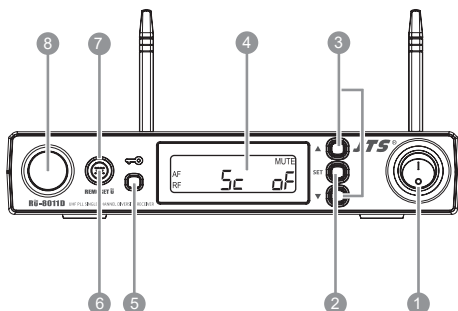


Rear panel

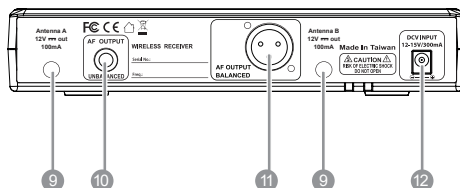

- ① Power: | means "ON" and ○ means "OFF"
- ② SET: this is for function settings. Push and hold for 2 seconds to enter the setting mode. Push "SET" repeatedly to search for the function you wish to set.
- ③ ▲/▼ In the setting mode, push ▲/▼ to change the function parameter
In the non-setting mode: push ▲/▼ to adjust volume
- ④ LCD display
- ⑤ Lock :push and hold "Lock" for 2 seconds to lock the buttons in order to prevent pushing any button by accident.
- ⑥ Remoset u : this allows user to synchronize the transmitter after modifying a parameter. Push " **REMOSET Ũ** " to synchronize the settings to the transmitter.
- ⑦ Remoset indicator : this shows the current pairing status. It flashes rapidly when data is being transmitted and the flashing stops when the synchronization is completed. However, the flashing slows down if synchronization fails after a period of time of pairing attempt.
- ⑧ Ultrasonic transmission unit: it transmits digital pairing data at ultrasonic frequency. When setting, direct the ultrasonic receiving element of the microphone to the ultrasonic transmitting unit of the receivers. The effective range is 30° on both sides with the optimized distance greater than or equal to 5~20CM.
- ⑨ Receiving antenna: fixed antenna of 1/4 wave length
- ⑩ 6.3mm phone jack: unbalanced audio output jack
- ⑪ 3P XLR male: balanced audio output jack
- ⑫ DC power socket: for 12~15V DC / 300mA power supply


RÜ-8011D LCD Display

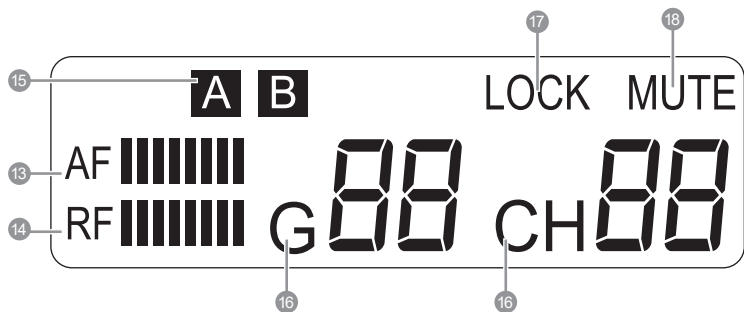

In the non-setting mode, the LCD looks like :

- 13 AF : Audio signal strength
- 14 RF : RF signal strength
- 15 **A B** : Antenna A/B
- 16 G / CH : Group / channel
- 17 LOCK : Button lock engaged
- 18 MUTE : Receiver mute

4-2 UHF PLL single-channel diversity receiver // **R $\tilde$ U-8011DB**

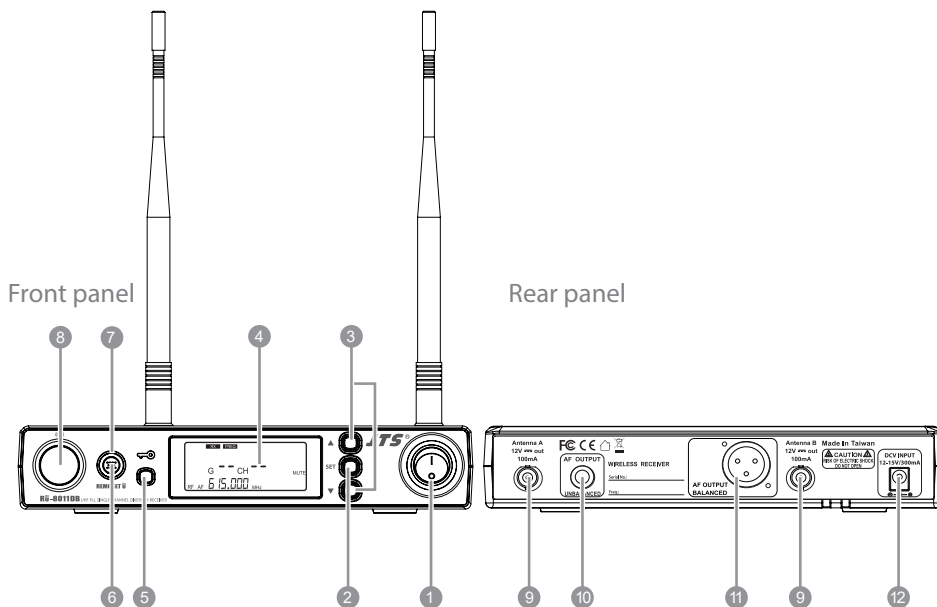

① ~ ⑧ : See page 8.


⑨ Female BNC antenna port: the 50 Ω BNC antenna is connected here. It also provides a booster power of 12~15 DC / 100mA for an external antenna booster.

⑩ 6.3mm phone jack: unbalanced audio output jack

⑪ 3P XLR male: balanced audio output jack

⑫ DC power socket: for 12~15V DC / 300mA power supply


RÜ-8011DB LCD Display

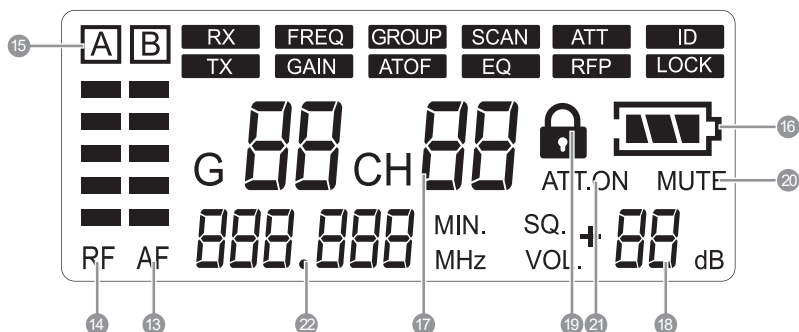

In the non-setting mode, the LCD looks like :

- 13** AF : Audio signal strength
- 14** RF : RF signal strength
- 15** A B : Antenna A/B
- 16** : Transmitter battery level
- 17** G 00 / CH 00 : Group/channel
- 18** VOL. + 00 dB : Volume
- 19** : Button lock
- 20** MUTE : Receiver mute
- 21** ATT.ON : Output attenuation
- 22** 000.000 MHz : Frequency


4-3 UHF PLL dual-channel diversity receiver // **RÜ-8012DB**

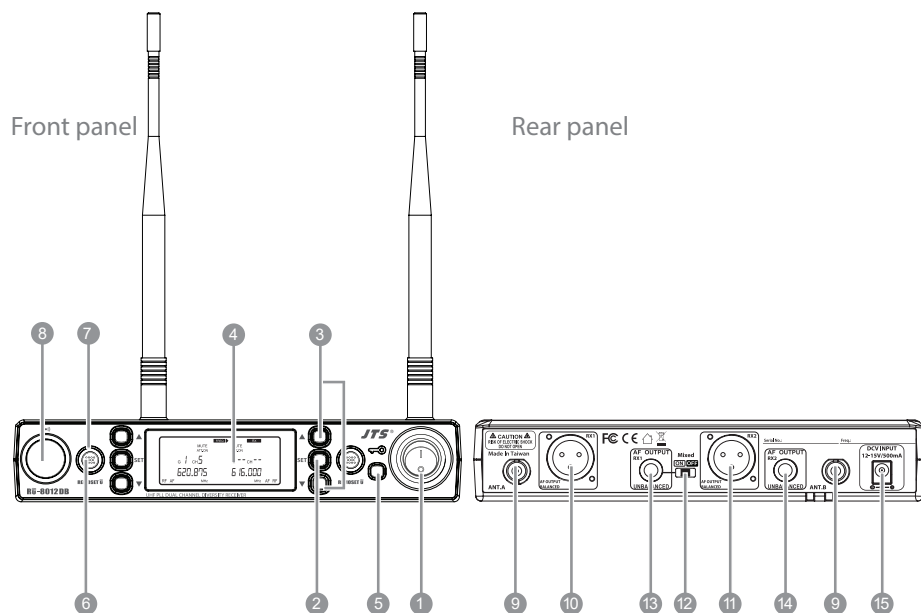

① ~ ⑧: See page 8.

- ⑨ Female BNC antenna port: the 50Ω BNC antenna is connected here. It also provides a booster power of 12~15 DC / 100mA for an external antenna booster.
- ⑩ Male XLR (RX1): RX1 balanced audio output jack
- ⑪ Male XLR (RX2): RX2 balanced audio output jack
- ⑫ Mixing: it allows the unbalanced audio signals from RX1 and RX2 to be mixed to RX1.
- ⑬ 6.3mm phone jack (RX1): RX1 unbalanced audio output jack
- ⑭ 6.3mm phone jack (RX2): RX2 unbalanced audio output jack
- ⑮ DC power socket: for 12~15V DC / 500mA power supply

Rũ-8012DB LCD Display

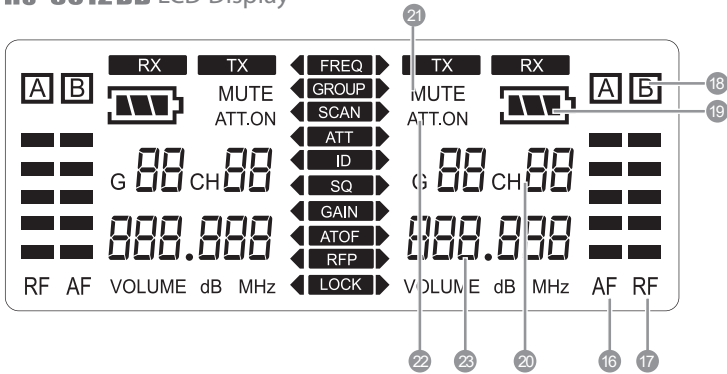


In the non-setting mode, the LCD looks like this:

- 16 AF : Audio signal strength
- 17 RF : RF signal strength
- 18 **A B** : Antenna A/B
- 19 : Transmitter battery level
- 20 G **88** / CH **88** : Frequency (group/channel)
- 21 MUTE : Receiver mute
- 22 ATT.ON : Output attenuation
- 23 **888.888** MHz : Frequency


4-4 UHF PLL hand-held transmitter // **RÜ-850TH**

- ❶ Power: push to turn the transmitter on. When the transmitter is on, push and hold for 2 seconds to turn it off.
- ❷ Mute: while the transmitter is on, switch Mute up to talk and down to mute. If the transmitter is off, switch the Mute up to turn the unit on. The transmitter turns itself off automatically after 1, 10 or 30 minutes of muting depending on setting.
- ❸ Ultrasonic receiving unit: it receives remoteset signal from the ultrasonic transmission unit at the receiver end.
- ❹ Battery holder: it holds UM3, AA 1.5V battery or rechargeable battery x 2.
- ❺ LED indicator: it shows the transmitter's status, including battery level, mute and pairing status.
- ❻ Detachable capsule module.

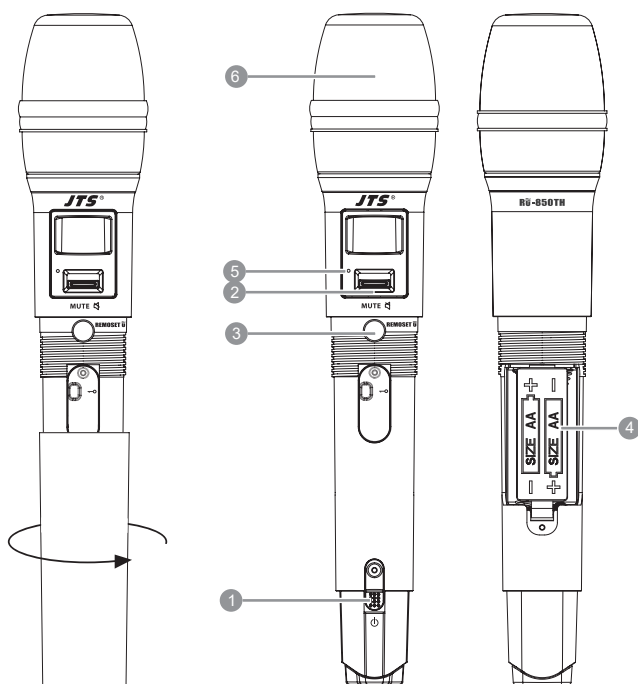


4-5 UHF PLL hand-held transmitter // **RÜ-850LTH**

- ① Power: push to turn the transmitter on. When the transmitter is on, push and hold for 2 seconds to turn it off.
- ② Mute: while the transmitter is on, switch Mute up to talk and down to mute. If the transmitter is off, switch the Mute up to turn the unit on. The transmitter turns itself off automatically after 1, 10 or 30 minutes of muting depending on setting.
- ③ Ultrasonic receiving unit: it receives pairing signals from the ultrasonic transmission unit at the receiver end.
- ④ Battery holder: it holds UM3, AA 1.5V battery or rechargeable battery x 2.
- ⑤ LED indicator: it shows the transmitter's status, including battery level, mute and pairing indication.
- ⑥ LCD display: it shows the parameter settings in the transmitter.
- ⑦ SET: it allows parameter settings, including frequency, group, channel, sensitivity, transmission power, auto off countdown and machine code.
- ⑧ ▲/▼: these are used with "SET" to change the parameter settings.
- ⑨ ⏻: push and hold the "LOCK" button for 2 seconds to lock the buttons. Push and hold again for 2 seconds to unlock.
- ⑩ Charging contact: if rechargeable batteries are used, this microphone can be recharged with an optional charger.

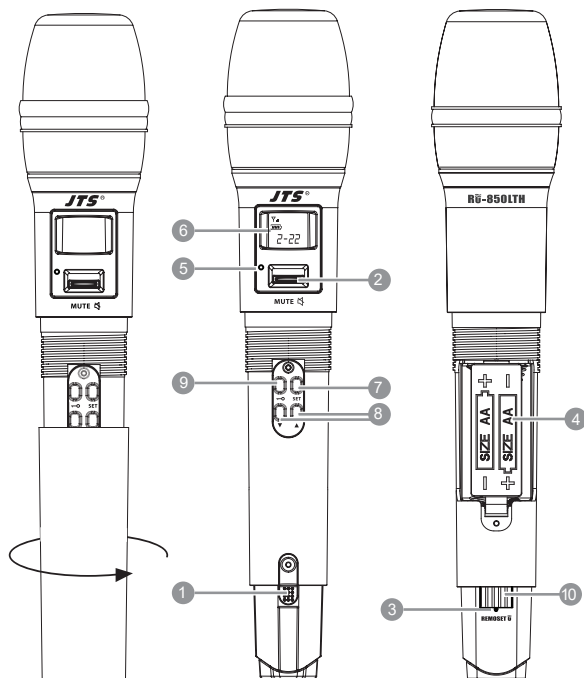


4-6 UHF PLL hand-held transmitter // **RÜ-G3TH**

- ① Power: push to turn the transmitter on. When the transmitter is on, push and hold for 2 seconds to turn it off.
- ② Mute: while the transmitter is on, switch Mute up to talk and down to mute. If the transmitter is off, switch the Mute up to turn the unit on. The transmitter turns itself off automatically after 1, 10 or 30 minutes of muting depending on setting.
- ③ Ultrasonic receiving unit: it receives pairing signals from the ultrasonic transmission unit at the receiver end.
- ④ Battery holder: it holds UM3, AA 1.5V battery or rechargeable battery x 2.
- ⑤ LED indicator: it shows the transmitter's status, including battery level, mute and pairing indication.
- ⑥ LCD display: it shows the parameter settings in the transmitter.
- ⑦ SET: it allows parameter settings, including frequency, group, channel, sensitivity, transmission power, auto off countdown and machine code.
- ⑧ ▲/▼: these are used with "SET" to change the parameter settings.
- ⑨ : push and hold the "LOCK" button for 2 seconds to lock the buttons. Push and hold again for 2 seconds to unlock.
- ⑩ Charging contact: if rechargeable batteries are used, this microphone can be recharged with an optional charger.

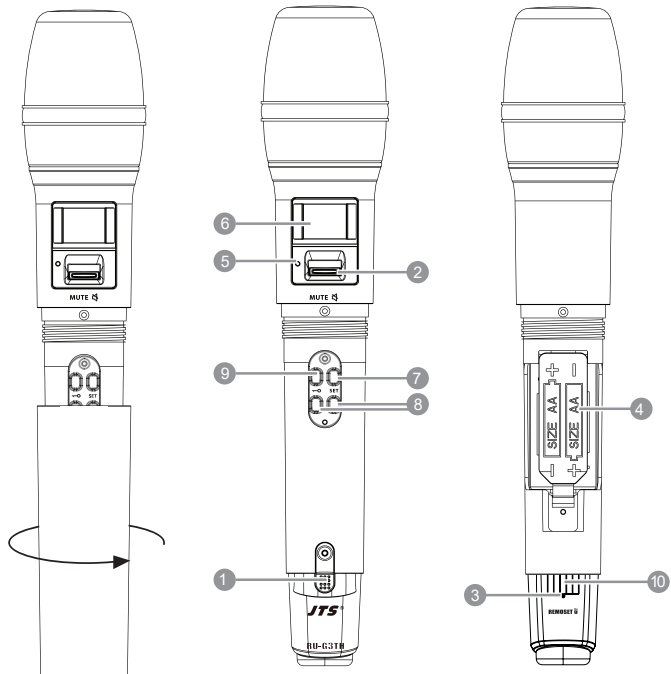

Indicators ---

Green	Battery > 2V
Flashing green	Microphone mute
Red	Battery ≤ 2V
Alternating red and green	Microphone mute (and battery low)
Blue	Pairing successful
Flashing blue	Data receiving error

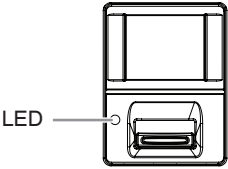

Others ---


Battery charging is supported. The transmitter turns off automatically when charging.

When battery is < 1.8V, the transmitter will turn off automatically.

If the microphone is turned off with the mute switch on mute, just slide the switch up to turn the microphone on.

4-7 UHF PLL body-pack transmitter // **RŨ-850TB**


- ❶ Mute/Power: push once to turn the unit on. While the unit is on, push once to mute and push again to talk. Push and hold for 2 seconds to turn off.
- ❷ Ultrasonic receiving unit: it receives the pairing signals from the ultrasonic transmission unit at the receiver end.
- ❸ LED indicator: it shows the transmitter's status, including battery level, mute and pairing indication.
- ❹ Antenna: the antenna of transmitter
- ❺ Microphone input port: 4P mini XLR jack
- ❻ Battery holder: it holds UM3, AA 1.5V battery or rechargeable battery x 2.

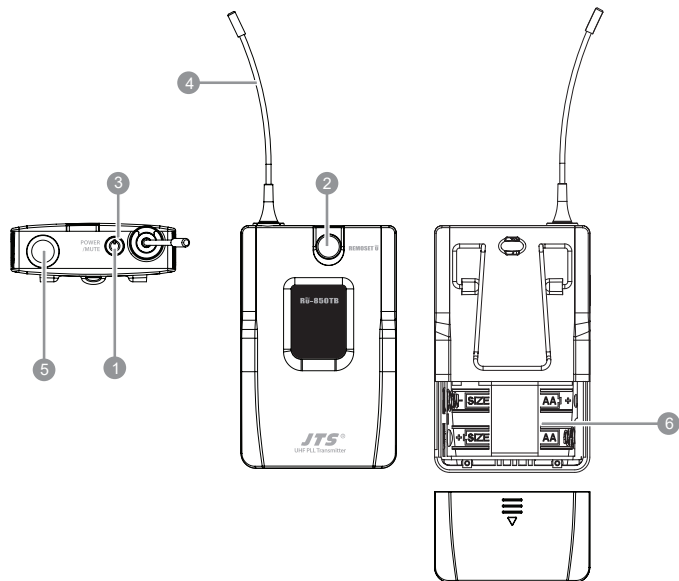

4-8 UHF PLL body-pack transmitter // **RŨ-850LTB**


- ❶ Mute/Power: push once to turn the unit on. While the unit is on, push once to mute and push again to talk. Push and hold for 2 seconds to turn off.
- ❷ Ultrasonic receiving unit: it receives the pairing signals from the ultrasonic transmission unit at the receiver end.
- ❸ LED indicator: it shows the transmitter's status, including battery level, mute and pairing indication.
- ❹ LCD display: it shows the parameter settings in the transmitter.
- ❺ Antenna: the antenna of transmitter
- ❻ Microphone input port: 4P mini XLR jack
- ❼ SET: it allows parameter settings, including frequency, group, channel, sensitivity, input signal attenuation, auto off countdown, lock on and machine code.
- ❽ ▲/▼: these are used with "SET" to change the parameter settings.
- ❾ Battery holder: it holds UM3, AA 1.5V battery or rechargeable battery x 2.
- ❿ Charging contact: if rechargeable batteries are used, this transmitter can be recharged with an optional charger.

Note: a user can also choose Auto power off with **RŨ-850LTB**

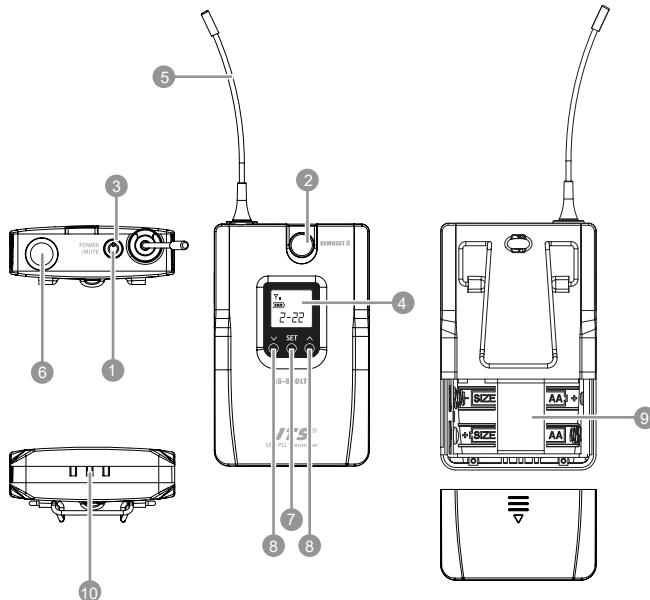


4-9 UHF PLL body-pack transmitter // RÜ-G3TB

- ① LCD display
- ② Ultrasonic receiving unit: it receives the pairing signals from the ultrasonic transmission unit at the receiver end.
- ③ REMOSET indicator: Blue : Pairing successful
Flashing blue : Date receiving error
- ④ Power:
 - (1)On: push the power button
Off: push and hold the power button for 2 seconds till the display shows "Power Off."
 - (2)Exit Setting Menu: when in the Setting Menu, push the power button to return to the main screen.
- ⑤ ▲/▼: these are used with "SET" to change the parameter settings.
- ⑥ SET: to set and save
- ⑦ Mute Switch / LED Indicator :
 - (1)Show green light when power is on.
 - (2)Show red light when battery level is too low.
 - (3)Flash red light when switch to "MUTE" function to mute the transmitter.
 - (4)Flash red light and green light when mute function is on and battery level is too low.
- ⑧ Battery tray

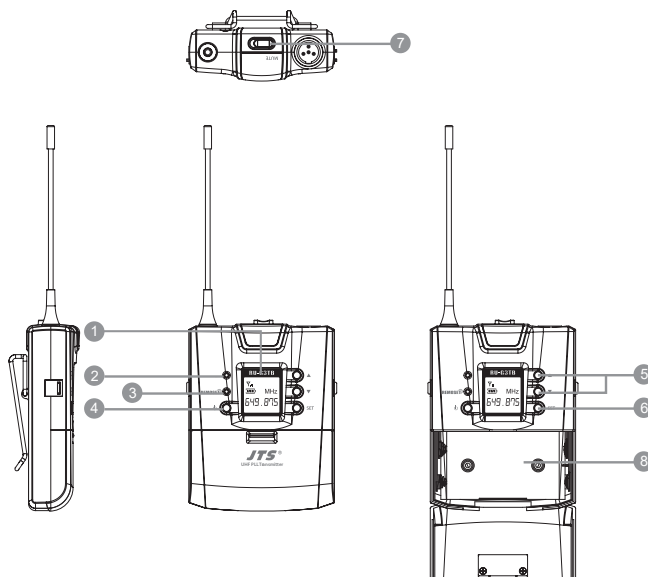

4-10 Accessories


- ① AC/DC adaptor
Switching Power Supply(100V~240V , 50~60Hz)
AC IN: AC100~240V/50~60Hz
DC OUT: DC12V/0.5A Option
- ② AF output cable (with $\Phi 6.3$ plug at both ends)

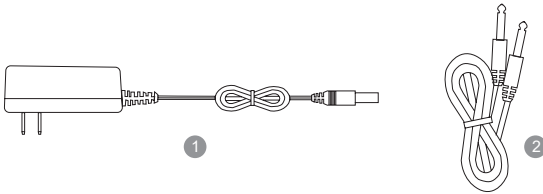

4-11 Optional Condenser Microphone


Lavalier Microphone // CM-501 CM-201i CM-125i

- ① Clip
- ② 4 Pin Mini XLR
- ③ Windscreen

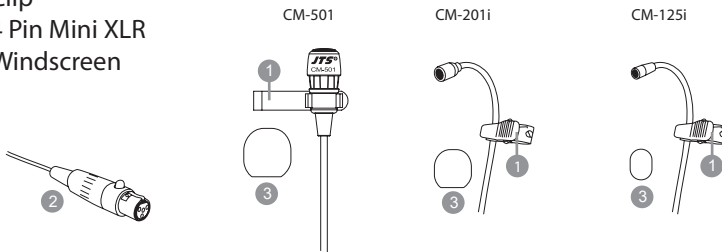






Headset Microphone // CM-214i CM-214Ui CM-214ULi CM-235i CX-504

- ④ Gooseneck
- ⑤ Adjustable headband
- ⑥ Headband
- ⑦ 4 Pin Mini XLR
- ⑧ Windscreen

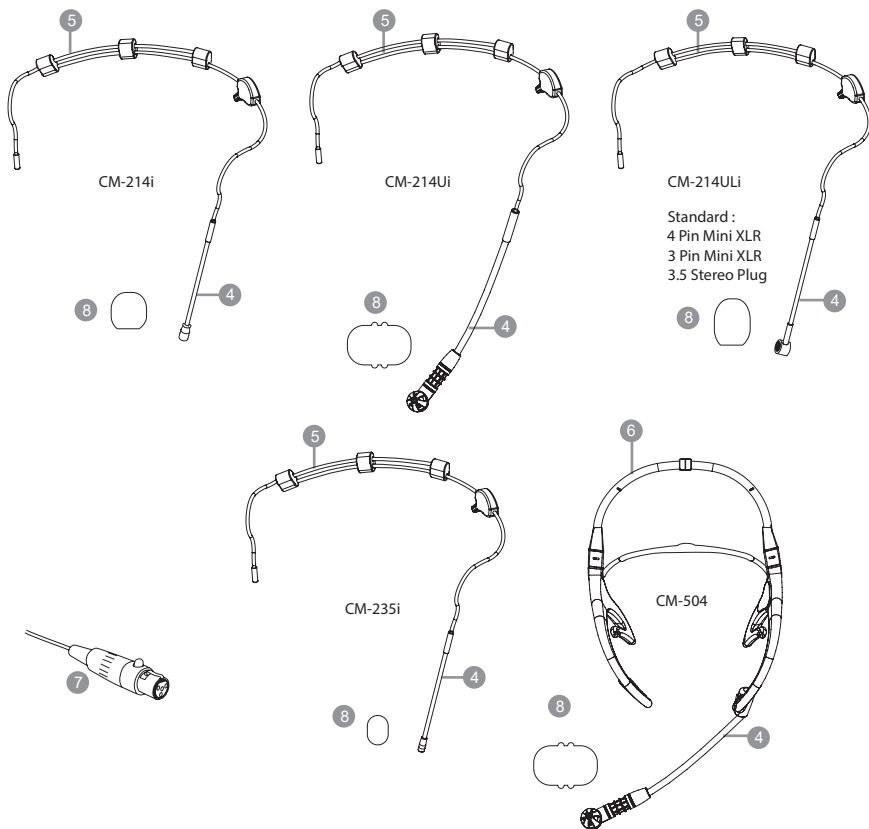

Ear-hook Microphone // CM-801 CM-804i CM-8015 CM-825i

 - ① Boom
- ② Adjustable Headband
- ③ Adjustable ear hook
- ④ Detchable Cable
- ⑤ Cable Clip
- ⑥ Windscreen
- ⑦ 4 Pin Mini XLR
- ⑧ 3 Pin Mini XLR Option
- ⑨ 3.5 Stereo Plug Option
- ⑩ 4Pin Hirose connector Option

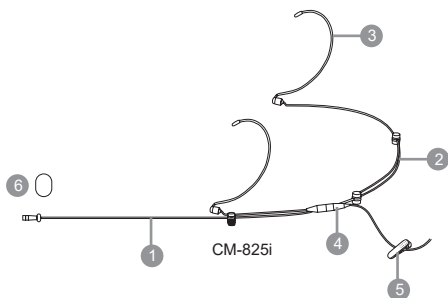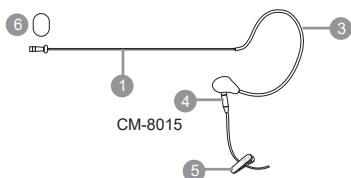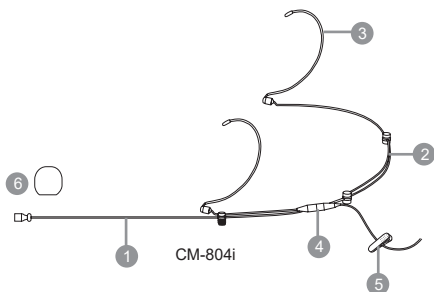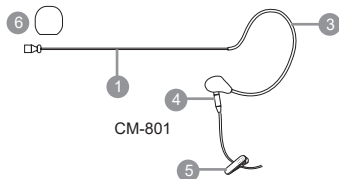

5. Connecting

5-1 How to connect the receiver

1. Connect the audio output of receiver to mixer or amplifier

1.1 **RŨ-8011D / RŨ-8011DB**

The XLR output jack or 6.3mm unbalance output jack can be selected to connect the AF output to a mixer or amplifier.

1.2 **RŨ-8012DB**

(1) The XLR output jack or 6.3mm unbalance output jack can be selected individually to connect the AF output to a mixer or amplifier for volume control.

(2) Switch the “Mixed” on the back to ON. This allows to mix the RX1 and RX2 signals to RX1’s 6.3mm non-balance output jack and then to a mixer or amplifier for volume control.

2. Connect the power

2.1. Connect the AC/DC adapter:


Check that the DC current and voltage ratings of the adapter match the label on the unit. Connect the DC terminal to the “DC input” port on the unit, and the AC end to an AC socket.

2.2. Set the parameters:

Turn the power on and set the parameters of receiver according to the setting instructions.



Caution! Secure the power cable on the fastening hook of anti-pulling clip in order to prevent the power cable from falling.

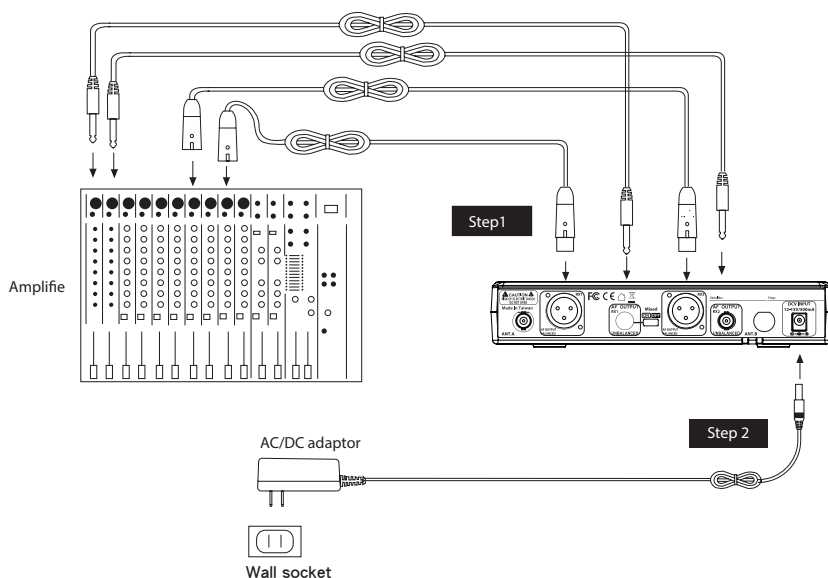

5-2 Transmitter installation // **RŨ-850TH / RŨ-850LTH / RŨ-G3TH**

The Mute button on the hand-held unit also triggers the power-on. That's why the unit is on as soon as the batteries are replaced. Therefore, if you do not wish to turn on after changing the batteries, keep the Mute switch on mute.

1. Unscrew the outer tube of the transmitter (Figure 1).
2. Place 2 AA batteries in the battery holder while make sure they are in the correct polarities (Figure 2).
3. Screw the outer tube on (Figure 3).
4. To turn the unit on:
 - a. Push the power button to turn on (Figure 4a), or
 - b. Push the Mute switch up also to turn the unit on (Figure 4b).
5. Set the transmitter parameters according to the instructions.

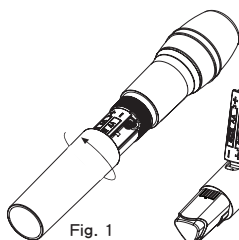


Fig. 1

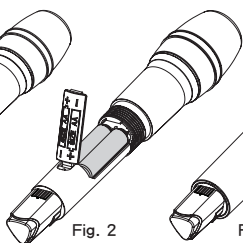


Fig. 2

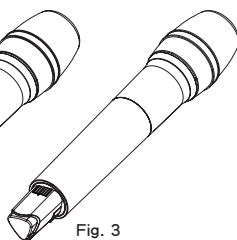


Fig. 3

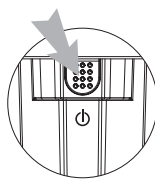


Fig. 4a


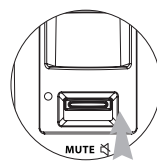


Fig. 4b


R̃-850TB / R̃-850LTB / R̃- G3TB

1. Slide the battery holder cover downwards (Figure 1).
2. Place 2 AA batteries in the battery holder while make sure they are in the correct polarities (Figure 2).
3. Slide the battery holder cover upwards to close (Figure 3)
4. According to the type of microphone, insert the 4-pin mini XLR jack in MIC IN to complete the installation (Figure 4).
5. Push the Power button to turn the unit on (Figure 5).
6. Set the transmitter parameters according to the instructions.

R̃-850TB / R̃-850LTB :

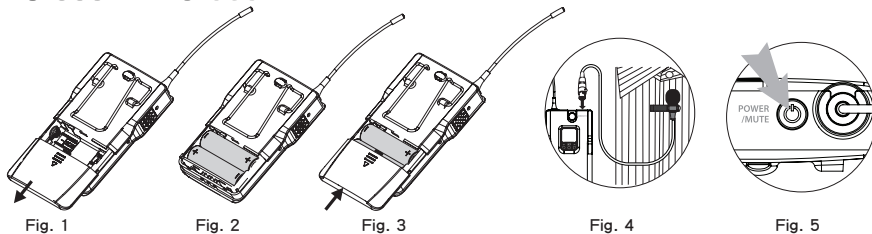

R̃- G3TB :

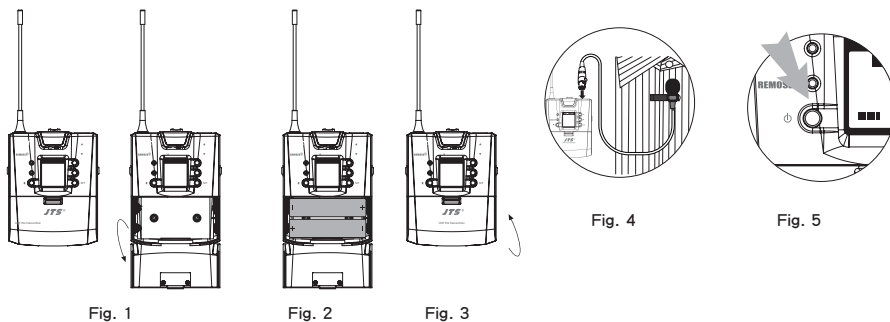


6. Instructions for use

6-1 How to use // **RU-8011D**

Parameter setting

Push and hold the “SET” button to enter the setting mode.

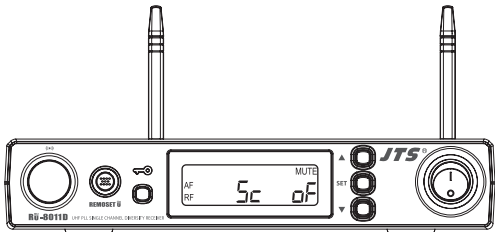

◎ Group / channel setting

G: group	Select default group 1~6
CH : channel	Select default channel, 1~22 max



Select the group when “G” is flashing; select the channel when “CH” is flashing.

◎ Channel scan

SC oF	This means the function is deactivated.
SC on	This means the function is activated. (scan to make sure this channel is occupied or not)The program will avoid it automatically to prevent interference.



This function is deactivated.

◎ Audio output attenuation (XLR)

At oF	No attenuation at audio output
At on	20dB attenuation at audio output



This function is deactivated.

◎ SQ receiving sensitivity

-5~+10dB; select SQ with ▲/▼	-5 is the maximum sensitivity.
	+10 is the minimum sensitivity.
	The default setting is 0.



The default setting is 0.

⊙ Microphone input sensitivity

Normal sensitivity	SE A : +15dB SE 9 : +12 dB SE 8 : +9dB SE 7 : +6dB SE 6 : +3 dB SE 5 : 0 dB SE 4 : -3 dB SE 3 : -6 dB SE 2 : -9 dB SE 1 : -12 dB SE 0 : -15 dB
20dB attenuation (body pack transmitter only)	SE AA : -5 dB SE A9 : -8 dB SE A8 : -11dB SE A7 : -14dB SE A6 : -17dB SE A5 : -20dB SE A4 : -23dB SE A3 : -26dB SE A2 : -29dB SE A1 : -32dB SE A0 : -35dB



Normal default sensitivity



20dB attenuation

⊙ ATOF: Automatic microphone off countdown under mute status

AO OF	This function is deactivated
AO 1	1 minute countdown to turn off
AO 10	10 minute countdown to turn off
AO 30	30 minute countdown to turn off




This function is deactivated.

⊙ RFP: RF microphone power

The transmitter comes with 2 stages of RF power output.

rF Lo	10mW
rF Hi	50mW

 

This shows that the RF output is LOW (10mW).

⊙ RC (Remoset Configuration)

rC Fr	Only frequency and group setting will be synchronized
rC AL	All data setting will be synchronized

The default setting is rC Fr.



Only frequency and group setting will be synchronized.

Volume adjustment

In non-setting mode, adjust the volume from 0 to -31dB using the▲/▼button.

- The minimum volume is 0 (-31dB).
- The maximum volume is 31(0dB).
- The default volume setting is 21(-10dB).




Minimum volume at 0(-31dB); maximum volume at 31(0dB).

Volume	0	1	2	3	...	21	...	31
dB	-31	-30	-29	-28	...	-10	...	0

Pairing **REMOSET**

Once the parameters are set, push the “ **REMOSET** ” button and the digital pairing data will be sent to the transmitter via ultrasonic transmitter for parameter synchronization. The indicator will flash rapidly while the data are being transmitted. When the synchronization is completed, the receiver will receive the corresponding data and the indicator will stop flashing. If the signal is not received for a certain period of time, the indicator will flash slowly to inform pairing failure (the slowly flashing indicator can be reset by pushing any button).


Note: The best pairing distance is greater than or equal to 5~20cm, ±30°.

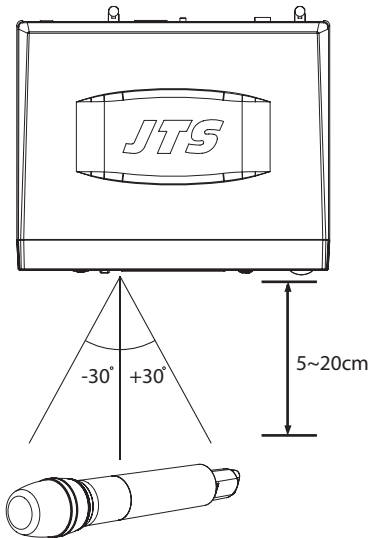

6-2 How to use // **RU-8011DB**

Parameter setting


Push and hold the “SET” button to enter the setting mode. Push the ▲/▼ button to choose to set RX (receiver) or TX (transmitter).

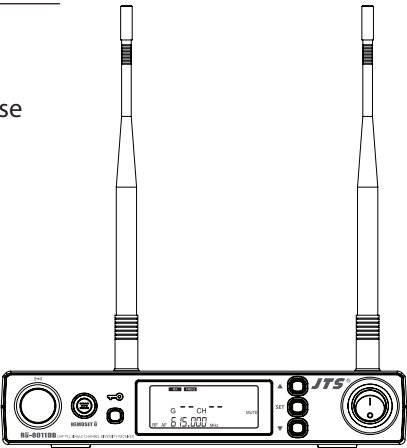

When RX receiver is selected:

◎ FREQ: frequency setting


In 1MHz	Select frequency with ▲/▼
In 0.025MHz	Select frequency with ▲/▼

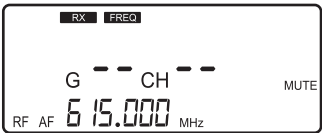

Select the number of frequency first in MHz and then in 0.025MHz.

◎ Group / channel

G: group	Select default group 1~6
CH: channel	Select default channel, 1~22 max

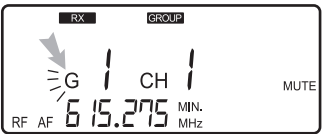

Select the group when “G” is flashing; select the channel when “CH” is flashing.

◎ Channel scan

SC off	This means the function is deactivated.
SC on	This means the function is activated. (scan to make sure this channel is occupied or not) The program will avoid it automatically to prevent interference.



This function is deactivated.

Note: this function works only in the preset mode.

⊙ Audio output attenuation (XLR)


At off	No attenuation at audio output
At on	20dB attenuation at audio output



This function is deactivated.

⊙ SQ Receiving sensitivity

-5~+10dB; select SQ with ▲/▼	-5 is the maximum sensitivity. +10 is the minimum sensitivity. The default setting is 0.
---------------------------------------	--

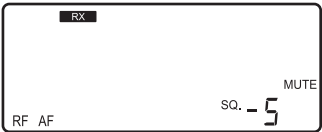


The default setting is 0.

When TX transmitter is selected:

⊙ ATT microphone audio input attenuation


At off	No attenuation at audio input
At on	20dB attenuation at audio input (depending on whether the transmitter is provided with the corresponding function).

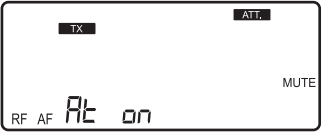

The function is activated with 20dB of audio input attenuation.

⊙ Microphone input sensitivity


Normal sensitivity	GAIN : +15dB GAIN : +12dB GAIN : +9dB GAIN : +6dB GAIN : +3dB GAIN : 0dB GAIN : -3dB GAIN : -6dB GAIN : -9dB GAIN : -12dB GAIN : -15dB
--------------------	--

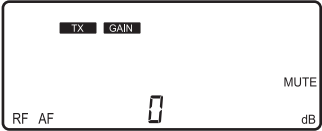

It shows the microphone input sensitivity is now at 0dB (default setting).

◎ ATOF: Automatic microphone off countdown under mute status

AO OF	This function is deactivated
AO 1	1 minute countdown to turn off
AO 10	10 minute countdown to turn off
AO 30	30 minute countdown to turn off

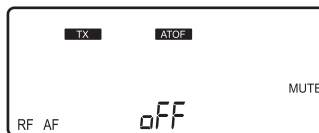


This function is deactivated.

◎ RFP: RF microphone power

The transmitter comes with 2 stages of RF power output (as per local regulations).

rF Lo	10mW
rF Hi	50mW

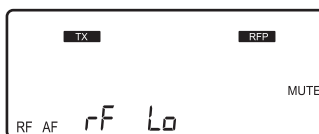


This shows that the RF output is LOW (10mW)

◎ RC (Remoset Configuration)

rC-FrE	Only frequency and group setting will be synchronized
rC-ALL	All data setting will be synchronized

The default setting is rC-FrE.

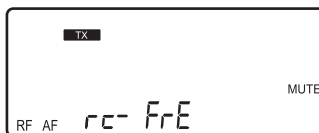


Only frequency and group setting will be synchronized.

Volume adjustment

In non-setting mode, adjust the volume from 0 to -31dB using the ▲/▼ button.

- The minimum volume is -31 dB.
- The maximum volume is 0 dB.
- The default setting is -10 dB.

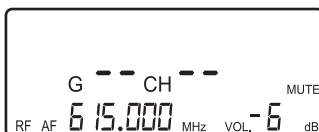

Minimum volume at -31db; maximum volume at 0db


Pairing REMOSET

See page 29.

6-3 How to use // **RŨ-8012DB**

Parameter setting _____


Push and hold the “SET” button to enter the setting mode. Push the ▲/▼ button to choose to set RX (receiver) or TX (transmitter).

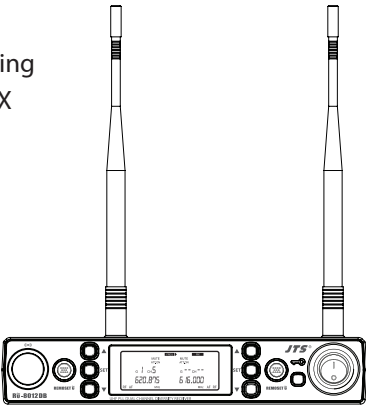

When RX receiver is selected:

◎ **FREQ: frequency setting**


In 1MHz	Select frequency with ▲/▼
In 0.025MHz	Select frequency with ▲/▼

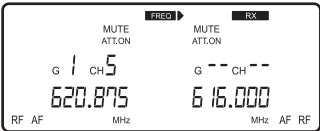

Select the number of frequency first in MHz and then in 0.025MHz.

◎ **Group / channel**


G: group	Select default group 1~6
CH: channel	Select default channel, 1~22 max

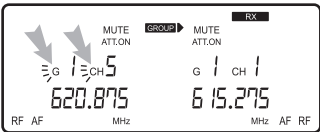

Select the group when “G” is flashing; select the channel when “CH” is flashing.

◎ **Channel scan**

SC off	This means the function is deactivated.
SC on	This means the function is activated (scan to make sure this channel is occupied or not. The program will avoid it automatically to prevent interference.

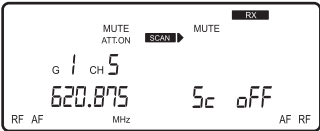


This function is deactivated.

Note: this function works only in the preset mode.

◎ Audio output attenuation (XLR)


At oFF	No attenuation at audio input
At on	20dB attenuation at audio input (depending on whether the transmitter is provided with the corresponding function) .

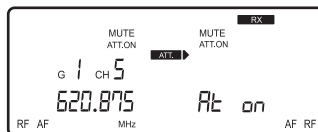

The function is activated with 20dB of audio input attenuation.

◎ SQ Receiving sensitivity

-5~+10dB; select SQ with ▲/▼	-5 is the maximum sensitivity.
	+10 is the minimum sensitivity.
	The default setting is 0.

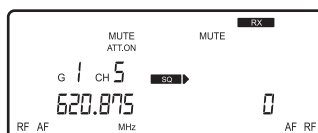


It shows the SQ is 0dB (default setting).

When TX transmitter is selected:

◎ ATT microphone audio input attenuation


At oFF	No attenuation at audio input
At on	20dB attenuation at audio input

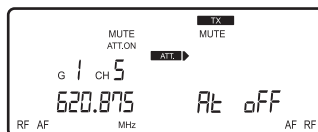

This function is deactivated.

◎ Microphone input sensitivity


Normal sensitivity	GAIN : +15dB
	GAIN : +12dB
	GAIN : +9dB
	GAIN : +6dB
	GAIN : +3dB
	GAIN : 0dB
	GAIN : -3dB
	GAIN : -6dB
	GAIN : -9dB
	GAIN : -12dB
	GAIN : -15dB

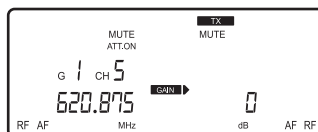

It shows the microphone input sensitivity is now at 0dB (default setting).

◎ ATOF: Automatic microphone off countdown under mute status

OFF	This function is deactivated
1	1 minute countdown to turn off
10	10 minute countdown to turn off
30	30 minute countdown to turn off

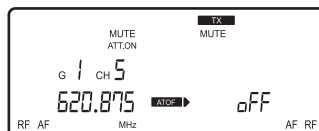


This function is deactivated.

◎ RFP: RF microphone power

The transmitter comes with 2 stages of RF power output (as per local regulations).

rF Lo	10mW
rF Hi	50mW

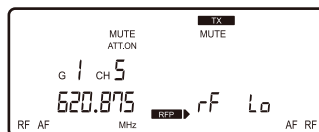


This shows that the RF output is LOW (10mW).

◎ RC (Remoset Configuration)

rC-FrE	Only frequency and group setting will be synchronized
rC-ALL	All data setting will be synchronized

The default setting is rC-FrE.

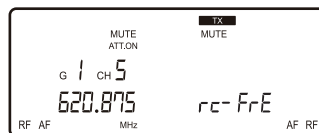


Only frequency and group setting will be synchronized.

Volume adjustment

In non-setting mode, adjust the volume from 0 to -31dB using the ▲/▼ button.

- The minimum volume is -31 dB.
- The maximum volume is 0 dB.
- The default setting is -10 dB.

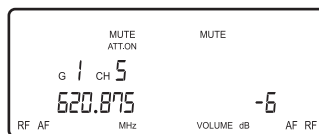

Minimum volume at -31db; maximum volume at 0db

Pairing REMOSET

See page 29.


Others

The transmitter's battery level is also shown on the LCD display. If the battery level is $\leq 2V$, the frame around the battery level will flash and the backlight turns into red as a warning (for **R $\tilde$ U-8011DB** and **R $\tilde$ U-8012DB**).

6-4 How to use // **RŨ-850TH / RŨ-850TB**

Parameter setting _____

Parameters, including group, channel,microphone input sensitivity, auto off countdown and RF power, are set at the receiver end and synchronized via **REMOSET ũ** .

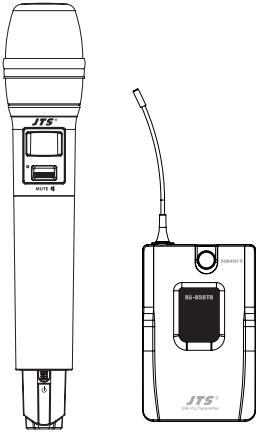


Pairing **REMOSET ũ** _____

See page 29.

Indicators _____

Green	Battery > 2V
Flashing green	Microphone mute
Red	Battery ≤ 2V
Alternating red and green	Microphone mute (and battery low)
Blue	Pairing successful
Flashing blue	Data receiving error

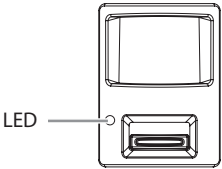


Others _____

- When the battery level is <1.8V, the transmitter will turn itself off automatically.
- When **RŨ-850TB** is on, push the mute/power button to mute the transmitter and push again to talk. Push and hold for 2 seconds to turn off.


6-5 How to use // **RŨ-850LTH/ RŨ-850LTB**

Parameter setting

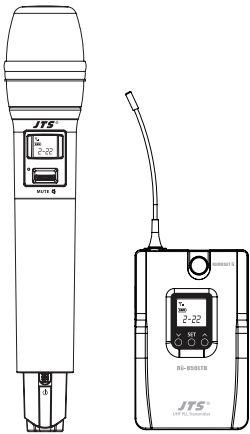

◎ **FREQ:** frequency setting


In 1MHz	Select frequency with ▲/▼
In 0.025MHz	Select frequency with ▲/▼

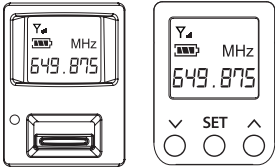

Select the number of frequency first in MHz and then in 0.025MHz.

◎ **Group / channel**

G: group	Select default group 1~6
CH: channel	Select default channel, 1~22 max Select default channel, 1~22 max

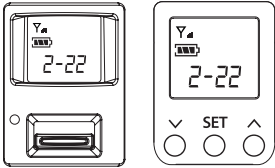


Select the number for group and then the number for channel.

◎ **ATT** microphone audio input attenuation

Att oFF	No attenuation at audio input
Att on	20dB attenuation at audio input

Only for **RŨ-850LTB**

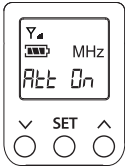


It shows the audio input attenuation at 20dB.

⦿ Microphone input sensitivity


Normal sensitivity	GAIN : +15dB
	GAIN : +12dB
	GAIN : +9dB
	GAIN : +6dB
	GAIN : +3dB
	GAIN : 0dB
	GAIN : -3dB
	GAIN : -6dB
	GAIN : -9dB
	GAIN : -12dB
	GAIN : -15dB

⦿ RFP: RF microphone power


rFP Lo	10mW
rFP Hi	50mW

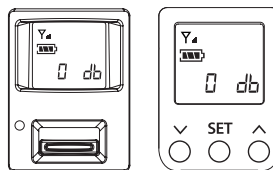

It shows the sensitivity is now at GAIN 0dB (default setting).

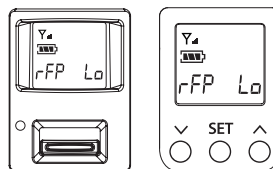


The RF output is LOW.

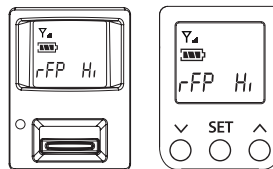

The RF output is Hi.



⦿ AUTO-OFF: Automatic microphone off countdown under mute status

OFF	This function is deactivated
1	1 minute countdown to turn off
10	10 minute countdown to turn off
30	30 minute countdown to turn off

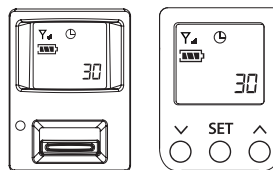

⦿ Key Lock

Loc on	Lock ON
Loc off	Lock OFF

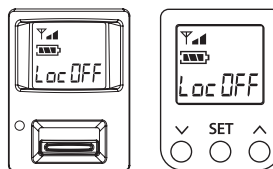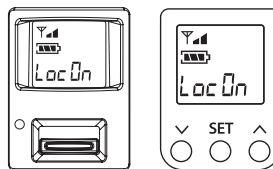


6-6 How to use // **RŨ-G3TH / RŨ- G3TB**

Push and hold the SET button for 2 seconds to enter the setting mode, and push the **▲/▼** button to select different parameters. Push the SET button again to save and exit the setting mode.

◎ **FREQ: frequency setting**

In 1MHz	Select frequency with ▲/▼
In 0.025MHz	Select frequency with ▲/▼

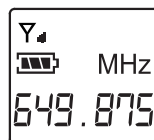

Select the number of frequency first in MHz and then in 0.025MHz.

◎ **Group / channel**


G: group	Select default group 1~6
CH: channel	Select default channel, 1~23 maxSelect default channel, 1~23 max



Select the number for group and then the number for channel.

◎ **Microphone input sensitivity**

Normal sensitivity	GAIN : +15dB GAIN : +14dB GAIN : 7 GAIN : +2dB GAIN : +1dB GAIN : 0dB (default) GAIN : -1dB GAIN : -2dB GAIN : 7 GAIN : -14dB GAIN : -15dB
--------------------	--

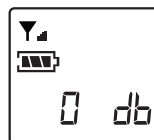

It shows the sensitivity is now at GAIN 0dB (default setting).

◎ **ATT microphone audio input attenuation**

Att off	No attenuation at audio input
Att on	20dB attenuation at audio input

Only for RU-G3TB



It shows the audio input attenuation at 20dB.

◎ RFP: RF microphone power

rFP Lo	10mW(default)
rFP Hi	50mW




The RF output is LOW.



The RF output is Hi.


◎ AUTO-OFF: Automatic microphone off countdown under mute status

OFF	This function is deactivated
1	1 minute countdown to turn off
10	10 minute countdown to turn off
30	30 minute countdown to turn off

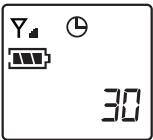

◎Key Lock

Loc On	Lock ON
Loc OFF	Lock OFF

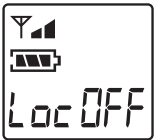

Others


Battery charging is supported. The transmitter turns off automatically when charging.

When battery is < 1.8V, the transmitter will turn off automatically.

If the microphone is turned off with the mute switch on mute, just slide the mute switch up to turn the microphone on.

7. Notes for the product

- (1) For the best signal receiving quality, always keep the receiver within 3m of the transmitter.
- (2) The receiver and transmitter shall be away from other metal objects, preferably 50cm or farther.
- (3) Do not point the microphone directly to a speaker, or there will be feedbacks.
It is recommended to hold the transmitter (microphone) at the middle section for the best pickup.
- (4) In case that the transmitter will not be in use for an extended period of time, the batteries shall be removed from the battery holder to prevent damage to the transmitter due to leak of battery electrolyte solution.
- (5) For the best power performance, it is recommended to change both batteries or use the products of the same manufacturer when they are to be changed.

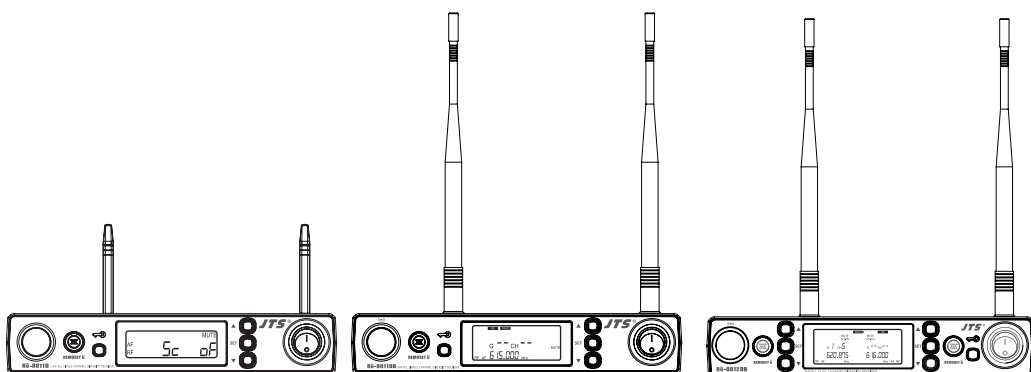

JTS

JTS[®] PROFESSIONAL CO., LTD.

No. 148, 9th Industry Road, Ta-Li Industrial Park,
Taichung City, Taiwan.

Tel: 886-4-24938803 Fax: 886-4-24914890

E-mail: jts@jts.com.tw

www.jts.com.tw



59508-084-10